


RISK ASSESSMENT SHALL NOT BE NEGLECTED

Getting the gangway from storage position to ship's side could be considered as a simple lift that may not require a thorough preparation and risk assessment. But when the gangway is placed on a congested deck, when crane operator has limited visibility, when personnel is not familiar with lifting operation, this can lead to accident. In this case the net got trapped in a ROV winch frame and when the AB tried to release it, his hand got pinched between the aluminum frame and the winch structure.

THE SAFETY POST IS BASED ON REAL EVENTS - PLEASE PRINT, POST AND DISCUSS THIS ISSUE!

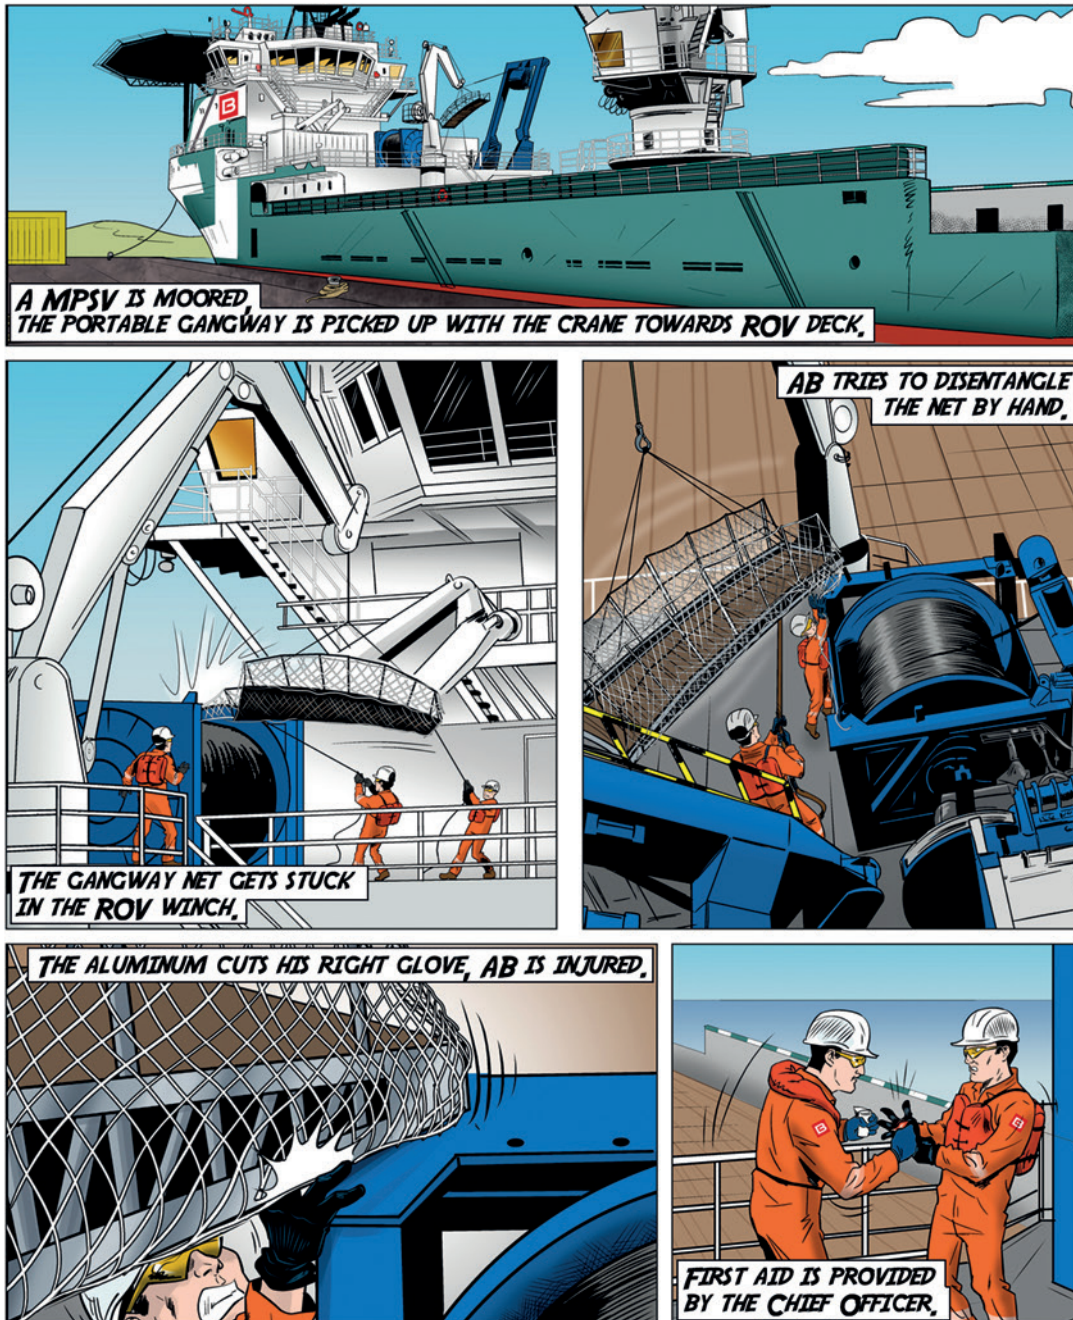

LIFE SAVING RULES

DO:

- Take time for pre task planning. (#1)
- Organize lifting operations with care.
- Stop the job, when you deem it is necessary to do so. (#2)

DON'T:

- Perform any operation without proper PPE (in this case mechanical gloves rather than impact rigger gloves). (#4)
- Put your hand in any line of fire and on any load. (#5)
- Perform any operation if line of supervision is not clarified. (#6)

